




MyWeigh®


STEELE

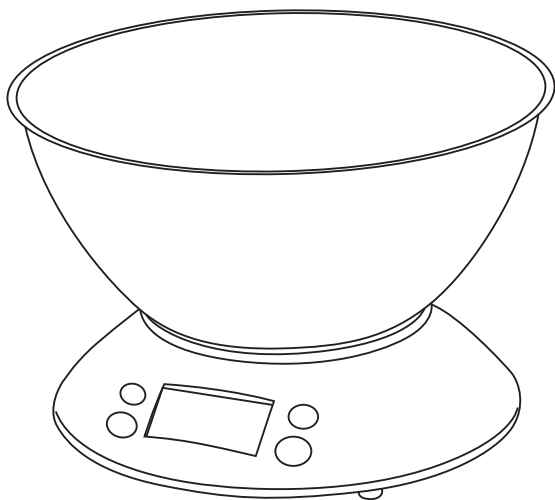

USER MANUAL

STEELE

kg X 1g CAPACITY KITCHEN SCALE

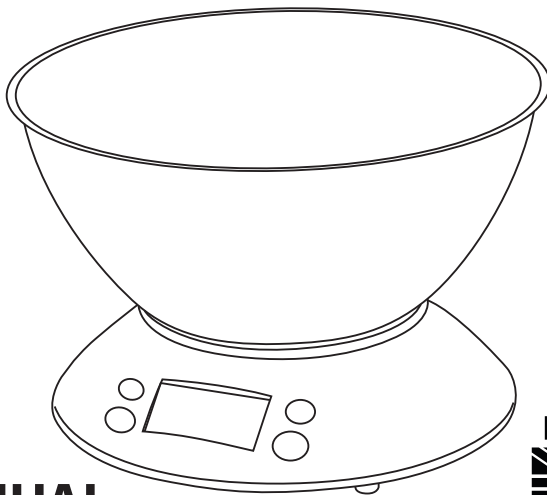

ENGLISH



USER MANUAL

Thank you for purchasing the My Weigh® STEELE kitchen scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service. For more information please visit www.myweigh.com.

Never load the scale with more than the maximum capacity. Although the My Weigh® STEELE is designed to be extremely durable with extra overload protection built into the case, overloading will permanently damage it! Avoid any exposure to extreme heat or cold, your scale works better when operated at normal room temperature. Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and/or a close proximity to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale. Handle with care. Gently place all items to be weighed onto the tray top. Avoid shaking, dropping or otherwise shocking the scale. Scales are delicate instruments and unlike cellular phones, scales have delicate sensors that determine how much an item weighs. If you drop or shock your scale, these sensors “feel” the shock and are sometimes destroyed. This happens with all digital scales. We design our scales to be as resistant to shock or drops as possible, however there is no way for us to protect 100% against load cell or sensor damage. Failure to follow these instructions will void your warranty.

Always allow the scale to acclimate to normal room temperature for at least one hour before use. Give your scale sufficient warm up time. Usually 30-60 seconds before calibration to give the internal components a chance to stabilize.

Batteries

Low Batteries & bad battery connections are the #1 cause of scale malfunction and inaccuracy! We test all of our scale returns from consumers and 60% of them are battery related problems. This sounds silly but it's true! A scale will perform poorly when it has low batteries. Use good quality batteries & replace them often (Remove the batteries if you plan to store the scale for longer than 14 days). We recommend using only good quality batteries with all of our scales. If your scale simply won't turn on while on battery power, it is often caused by loose battery connections. Battery prongs (terminals) are made of metal and they have to be in contact with the batteries. Some poorly designed batteries have recessed or partially obstructed battery terminals. This may cause your prongs to be touching the plastic housing of the battery instead of the metal of the battery terminal.

Battery installation

- a) Press and lift open the battery cover located at the bottom of the unit.
- b) Insert the batteries and make sure the polarity is correct (+) and (-).
- c) Close the battery cover until it clicks shut.

OPERATION INSTRUCTIONS

Weighing Procedures

1. Press **[ON/OFF]** to turn on the scale, wait for a few seconds and "0" will appear on the display.
2. Press **[UNIT]** to select a weighing unit g:kg, oz:lb, ml.
3. Start weighing. Verify the reading is "0". Place objects on the weighing platform to weigh.

Tare

Tare can be used for eliminating the weight value of an empty container. Place an empty container on the scale and press **[Z/T]** Then place the items to be weighed in the container. NOTE: When all weight is removed from the weighing tray, the tared value of a container will be displayed as a negative number. Press **[Z/T]** again to return the scale to zero.

CALIBRATION

How to calibrate ****you must have an accurate 3kg & 5kg weight or combination of weights in order to calibrate****

Calibration may be required when the scale is first set up for use, or if the scale is moved to a different altitude or new location. This is necessary because the weight of a mass in one location is not necessarily the same in another location. Also, with time and use, mechanical deviations can occur.

1. From the off setting turn on the scale by pressing the **[ON/OFF]** button.
2. While the display is showing "8888" press the **[ON/OFF]** 3 times. Then press and hold the **[ON/OFF]** button until a random number is displayed.
3. Release the **[ON/OFF]** button and wait until the display shows the first required calibration weight "3000" - 3KG.
4. Gently place the calibration weight on the weighing platform and wait for the display to show the second required weight "5000" - 5KG
5. Calibration is complete when the scale displays "PASS". The scale will to normal weighing mode.

FEATURES

Timer

It is possible to set the timer for a maximum of 99 minutes and 59 seconds:

1. Press and hold **[T-SET]** to enter the timer setting.
2. Use the **[UNIT]** and **[Z/T]** keys to set the digit value and **[T-SET]** to move to the next digit.
3. After the last digit is set, press **[T-SET]** again to start the timer.
4. When the timer gets to "00.00" an alarm will beep 60 times and the scale will shut off automatically. The timer can be reset at any time by switching off the scale or by pressing and holding **[T-SET]**.

Thermometer

Current temperature is shown on the top left corner of the LCD. This ranges from 0°C ~ 40°C or from 32°F ~ 104 °F. Users can select between Celsius and Fahrenheit on the scale by pressing **[T-SET]**.

Extra Large Mixing Bowl

The STEELE is provided with a stainless steel bowl. This bowl is large to accommodate usual food items and is washable with water or in a dishwasher.

Negative Value

Any tared value will be displayed as a negative number once all weight is removed, press **[Z/T]** to re-zero the scale.

Auto-Off

An auto shut off feature is provided to conserve battery power. The unit will automatically turn off after 2 minutes of inactivity.

Overload Indicator

When the display shows "Err", this indicates an overload. Remove excessive load immediately. Remember: you can permanently damage the scale and void your warranty by overloading it!

Power Up Segment Test

When first turning the unit on, the scale will run a quick diagnostic and it will display a countdown. This display will remain for a few seconds and then reset to zero.

Low Battery Indicator

If the display shows the low battery symbol, it indicates low batteries. The batteries need to be replaced for the scale to function properly.

KEYPAD FUNCTIONS

- **ON/OFF** - ON/OFF power switch
- **T-SET** - Timer Setting
- **▼ UNIT** - Unit Selection
- Adjust time down
- **▲ Z/T** - Press to TARE an item
- Adjust Timer up

DISPLAY SYMBOLS

- Alarm Symbol & Timer
- Temperature °C/ °F
- **TARE** Tare Weight is counted
- Negative reading
- **ZERO** Zero weight
- Low battery

SPECIFICATIONS

Capacity	5kg x 1g	Units	g;kg, oz;lb, ml
Auto-Off	2 min.		
Scale Dimension	190mm x 190mm x 50mm		
Tray Dimension	Ø 117mm		
Scale Weight	387g		
Operating Temperature	Optimum: 10~40°C (50~104°F)		
Power Source	2 x AAA Batteries		
Tare Range	Up to the scale's maximum capacity		



www.myweigh.com